

**H. L. Worden Co.**  
**"Make a Lamp"**  
**System**

**SC7-4 Peacock T**

Rev. 12/12

Cartoon Pattern Packet

**Lamp Specifications**

No. Glass Pieces: 200  
 Glass Needed: 1.5 sq. ft.  
 Diameter: 7"  
 Height: 4.6"  
 Aperture: 2"  
 Design Repeats: 4

**Needed to make this lamp**

Pattern Packet No. SC7-4\*  
 MiniForm™ No. SC7\*\*  
 Stained Glass  
 2" Vase Cap\*\*\*  
 Lamp Base or Hanging Hardware  
 to Swag



**Additional Items Needed**


Basic Supplies  
 Basic Tools

**\*No. SC7-4 Pattern Packet**

**Includes:**

1 Paper Pattern Sheet  
 1 MagicStrip™ Sheets  
 1 Instructions  
 1 Color Key w/ Glass Descriptions

**Lamp**

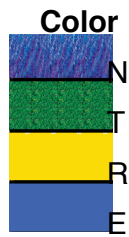

Color	Key	Description	Glass Type	Sq. Ft.
N		Background	Blue, Purple Opal	1
T		Out. Eye Ring	Emerald Green Opal	.25
R		In. Eye Ring	Yellow Opal	.125
E		Eye	Blue Opal	.125

**\*\*No. SC7 MiniForm™**


360° form embossed and  
 numbered to accept glass  
 placement guides (cartoon)

One Reusable FullForm™ is used



to make this 4-repeat design


**\*\* 2" Vase Cap**



VC2 VHC2  
 Need One 2" Vase Cap  
 Sold Separately

Paper Pattern  
 MagicStrips™  
 MADE IN USA

# MINI FORM CONSTRUCTION TIPS

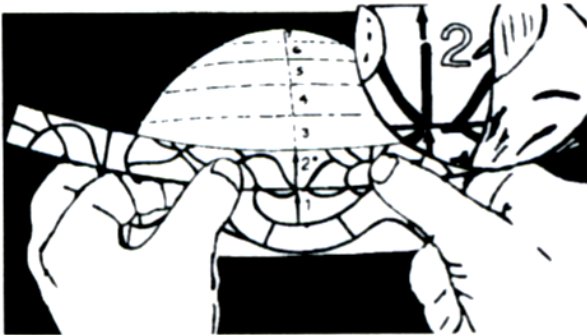

## MagicStrip™ Installation

Center arrow over molded vertical line & leave the space of the molded lines between each strip.

## Foil Wrapping Small Pieces

When foiling small pieces such as flower centers, flower petals, and leaves, it is best to overlap foil on glass approximately 1/64"; wider foil will cover too much of the glass. The exception is on small pieces at the top of the lamp. These pieces should be wrapped with at least a 1/32" overlap. Increasing the size of the overlap adds strength to the lamp. If you have foil that is too wide, it can be easily trimmed with scissors, Leave the paper backing in place while trimming. the untrimmed edge is placed on the outside for nice even seams.

Copper foil is easily trimmed. Leave backing on.



Wear heavy leather gloves



10, 12, or 14 gauge copper wire or BRAIDED WIRE.




Copper wire covered with solder

## Reinforce Top

Remove the lamp from the form. To reinforce the aperture opening solder a loop of copper wire inside. Use size 14, 12, or 10 gauge, cover with solder. Use leather gloves to hold wire.

## Vase Cap Tips

Center, level and tack solder the vase cap in the aperture opening, and firmly attach with solder seam. Wash and rinse thoroughly. Apply antiquing after vase cap has been installed and all soldering completed.

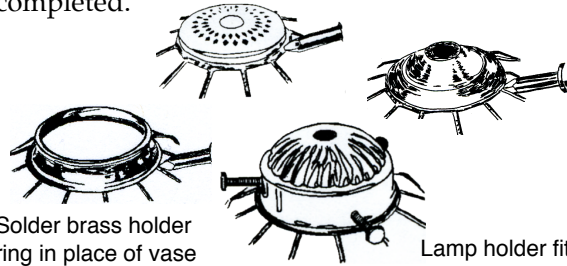


Solder brass holder ring in place of vase cap.

Lamp holder fits over the brass holder ring.

## Reinforce Bottom

To reinforce the bottom edge bend and solder on short pieces of copper wire, cover with solder. Use same gauge wire as at top. Braided wire can also be used; especially around uneven bottom borders.

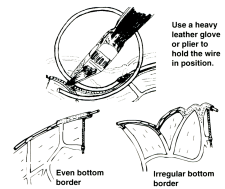

Use a heavy leather glove or plier to hold the wire in position.

Even bottom border

Irregular bottom border

## Display Your Lamp




SWAGGED WALL MOUNT LAMPS

WALL MOUNT LAMP



CEILING FAN LAMPSHADE ASSEMBLY

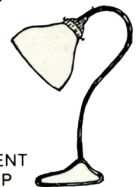

STUDENT LAMP

**GlassHouseStore.com**  
**Decatur IL**

